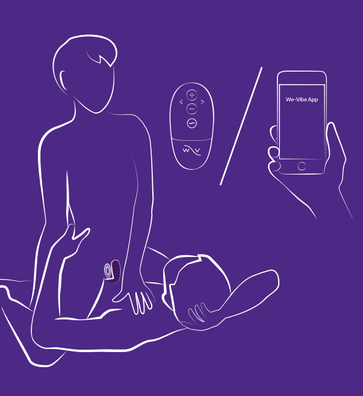

The Effortless Connection

Go to www.we-vibe.com for the complete user manual.

Customer Care
care@we-vibe.com
www.we-vibe.com

WOW Tech Europe GmbH
Hermann-Blankenstein-Str. 5
10249 Berlin, Germany

Designed in Canada.

Date of issue: 04/2023
MA-00246_rev-C

22
PAP

For other languages
scan the QR code

Für andere Sprachen scanne den
QR-Code

Scannez le code QR
pour les autres langues

Escanea el Código QR para ver otros
idiomas

Para outras línguas
digitaliza o código QR

Scan de QR-code
voor andere talen

Instrukcje w innych językach są
dostępne po zeskanowaniu kodu QR

Для других языков отсканируйте
QR-код
他の言語で利用するには QR コードを
スキャンしてください

타언어를 위해 QR 코드 스캔
如需其他語言版本，請掃描 QR 碼

Sync O

Quick start guide

Pleasure to
meet you

we-vibe

Elevate Intimacy

Sync O effortlessly adds hands-free vibrations to partner play with its unique, adjustable shape. The smooth, silicone loop keeps Sync O fit securely in place, sending those satisfying vibrations exactly where you want them – no matter where your play takes you.

Contents

Page 01. **Power on**
Page 03. **Cleaning**
Page 04. **How to use**
Page 06. **Charging**
Page 07. **Pairing**
Page 09. **We-Vibe remote**

Box contains: Sync O, We-Vibe remote, charging cable, quick start guide, safety information

Box does not contain: USB AC adapter

Please read the safety instructions in the Compliance & Safety Information before first use.

Getting to know your Sync O

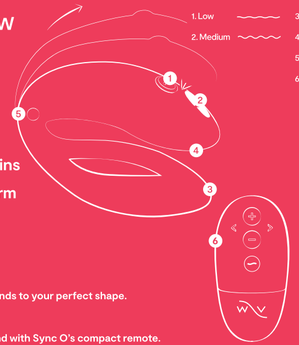

1 We-Vibe button
Press to switch on. Press again to cycle through vibration patterns. Hold again to turn off.

2 Magnetic charging pins

3 Internal O-shaped arm
Massages the G-spot during sex.

4 External stimulator
Massages the clitoris during sex.

5 Adjustable fit
Sync O's adjustable hinge design bends to your perfect shape.

6 We-Vibe remote
Keep control in the palm of your hand with Sync O's compact remote.

1. Low
2. Medium
3. High
4. Ultra
5. Pulse
6. Cha-Cha
7. Tease
8. Ramp
9. Tempo
10. Heartbeat

On/Increase
Press the ⊕ button to power on.
Press again to increase the intensity.

Decrease
Switch back to a lower intensity level by pressing the ⊖ button. Hold to turn off.

Next
Press the ⊙ button to cycle through different vibration patterns.

Previous
Switch back to your previous pattern by pressing the ⊘ button.

We-Vibe button
To pair your We-Vibe remote with Sync O.

Step 1: **clean**

- Rinse Sync O with warm water and dry with a lint-free cloth.
- We recommend using a premium toy cleaner for best results.

splashproof (IPX4)

waterproof (IPX7)

Step 2: **enjoy**

Adjust Sync O's shape exactly how you want it.

- Bend and manipulate Sync O carefully to avoid damage.

We recommend applying water-based lube to both Sync O and your body.

Cycle with ease through 10 different vibration patterns with the We-Vibe remote.

Step 3: **charge**

Enjoy up to 2 hours of play with every charge. When it's time for a recharge, place charger on magnetic pins. After 90 minutes, your toy is ready to go!

90 min

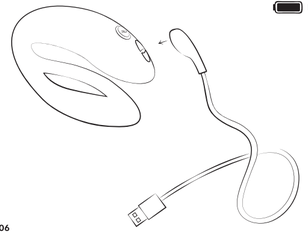

Step 4: **pair**

Sync O comes paired to your We-Vibe remote out of the box.



- Sync O can only pair to one remote or app-enabled device at a time.

Same room play

To pair Sync O to We-Vibe App, follow the in-app pairing instructions on your app-enabled device.

Press and hold the We-Vibe button for 5 seconds. Sync O vibrates twice and the LED will start flashing. Sync O is in pairing mode now.

Once paired, Sync O will vibrate three times and the LED will stop flashing.



Long distance play

To play long distance, both you and your partner need the We-Vibe App on your smartphones. Sync O is then paired to the phone that remains within Bluetooth range.

After exiting the We-Vibe App, press and hold the We-Vibe button on Sync O for 5 seconds. Sync O vibrates twice and the LED will start flashing Hold the We-Vibe button on your We-Vibe remote for another 5 seconds.

Once paired, Sync O will vibrate 3 times and LED will stop flashing.



Step 5: **battery**

To change the battery in your remote control, simply pull off the bottom cap and lift out the battery. If the battery is secured with a screw please loosen the screw of the plastic cover with a screwdriver. Remove the cover and take out the battery.

Replace it with a non-rechargeable CR2032 button cell battery and reinstall the plastic cover, if included.